

## PANEL 6

### 5 Prepare Prepare CANNABIS Sample

- 1) Cut off piece of Cannabis.
- 2) Break off small piece of Cannabis. *Use about 40-50mg of sample.*
- 3) With Sample Insert open, grind cannabis on rim of sample compartment and fill to the brim.

*Note: by gently grinding the sample, you are releasing the chemicals for the MyDx device to detect.*



- 4) Close top of insert until it clicks.
- 5) Stimulate Sample by tapping cover of insert against a hard surface to stimulate the release of chemicals in the Cannabis.

*Note: The inserts are for a single use only to preserve the integrity of the test results. Additional inserts can be ordered through [cdxlife.com/cdxshop](http://cdxlife.com/cdxshop).*

- 6) Repeat the Perform Sample Analysis procedure and run your CannaDx test.

#### Useful Links

CDx Life Main Website: [cdxlife.com](http://cdxlife.com)  
 Product Disclaimer: [cdxlife.com/disclaimer](http://cdxlife.com/disclaimer)  
 FAQ: [cdxlife.com/faq](http://cdxlife.com/faq)  
 Service Procedures: [cdxlife.com/service](http://cdxlife.com/service)  
 Safety: [cdxlife.com/safety](http://cdxlife.com/safety)  
 Security: [cdxlife.com/security](http://cdxlife.com/security)  
 Warranty Terms: [cdxlife.com/warranty](http://cdxlife.com/warranty)

## PANEL 7

### 6 Analyze Measure Sample


Place your MyDx Analyzer on a flat, cool, dry surface. *Sample measurement will take 6 minutes.* Results will be presented after 4 minutes while the MyDx Analyzer continues to flush the system for 2 minutes.



When the MyDx Analyzer is measuring you will see a spinning logo on the start button, a time countdown and a blue progress bar. The blue bar indicates the mobile device is receiving data from the MyDx Analyzer. *If the progress bar is not blue, data is not being received and you should start your test over.* You will also see a *flashing blue light* on the MyDx Analyzer LED indicator light to indicate testing is occurring.

## PANEL 8

### 7 View Total Chemical Profile (TCP)

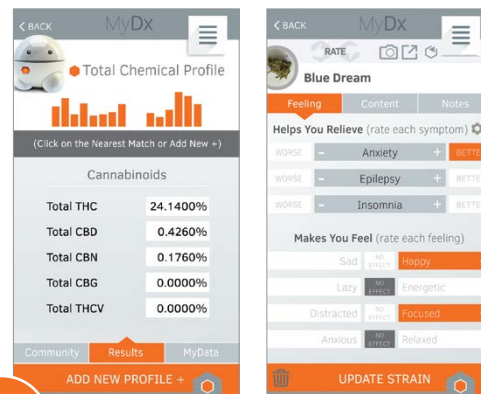

Once the analyzer has finished measuring, you will be presented with the chemical content of your sample displayed as a bar graph. This represents the unique **Total Chemical Profile** of each sample. Scroll up and down to view the derived individual Cannabinoid and Terpene values.

- 1) You may select the *Community* or *MyData* tabs to compare the current TCP profile with those in the MyDx Community or your previously saved samples.

- 2) Click **Add New Profile+** to give meaning to your data and make a record of the sample's effects.

### 8 Add Meaning to Your Results!

- 1) Click on **Strain Profile Name** at the top of the screen and assign a name to your sample.
- 2) Capture what it helped you relieve and how it made you feel by rating each symptom and feeling.
- 3) Then, click on **Save to MyData+** to record this information in your personal profile.

## PANEL 9

### 9 Store Remove the Insert from the Tray

In order to remove the Sample Insert from the tray, place your thumb along the back of the tray and push up the back edge of the insert until lying tilted in the tray. Subsequently grasp sides of insert and lift up and away from tray.

### 10 Turn Off and Store Your MyDx Analyzer

When you have finished testing, perform the following 3 steps to safely flush, turn off, clean and store your MyDx Analyzer:

- 1) Insert a blank sample insert into the MyDx Analyzer and perform a Full Measure to flush the system.
- 2) Disconnect all cables and turn off your MyDx Analyzer. Use a dry soft, lint-free cloth. Avoid getting moisture in any openings. Don't use cleaning products. Remove any sample remnants from the Insert Tray and use clean compressed air to remove any residue. Do not blow air directly into unit interior opening. Only use compressed air on insert tray. A Q-Tip can also be used to clean the sample insert tray.
- 3) Leave a clean blank Sample Insert inside the MyDx Analyzer and store in a cool, dry place.



**SUPPORT:** If you encounter any issues restart both your MyDx App and MyDx Analyzer and start over. This should solve the problem however, if you have problems contact support at [support@cdxlife.com](mailto:support@cdxlife.com) or call us at **800.814.4550**

©2015 CDx Inc.  
4225 Executive Square, Suite 600, La Jolla, CA 920

## FRONT COVER

**MyDx Service Overview**  
The MyDx Service connects the **MyDx Analyzer** to the **MyDx App** using BLE (Bluetooth Low Energy) connection. The MyDx App communicates with the secure MyDx Cloud via the Internet.




MyDx Analyzer      MyDx App      MyDx Cloud

INSIDE THE BOX YOU'LL FIND:

- MyDx Service Quick Start Guide
- MyDx Analyzer
- CannaDx Sensor
- Ten (10) Disposable Sample Inserts
- Power Supply Cord with Adapter
- Micro USB Cable



Full User Manual  
available online for download:  
**[CDxLife.com/support](http://CDxLife.com/support)**

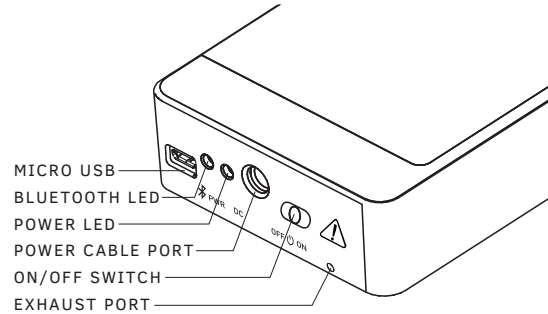

### MyDx Analyzer LED Colors + States

Switch analyzer ON to read LED indicator lights.

#### Bluetooth LED Indicator Lights

- **PINK** - MyDx Analyzer is starting up.
- **BLUE** - MyDx Analyzer is synced to the mobile device via Bluetooth connection.
- **BLINKING PINK** - There is a MyDx Analyzer malfunction. Contact CDx support at [support@cdxlife.com](mailto:support@cdxlife.com).
- **BLINKING BLUE** - MyDx Analyzer testing is in progress.

#### Power LED Indicator Lights

- **GREEN** - MyDx Analyzer battery charge is more than 50% and ready for use.
- **YELLOW** - MyDx Analyzer battery charge is below 50% and should be charged soon.
- **RED** - MyDx Analyzer battery charge is below 10% and needs to be recharged before performing any further measurements.
- **ORANGE** - Power On
- **BLINKING YELLOW** - MyDx Analyzer is charging on USB
- **OFF** - After 30 seconds of no activity the MyDx Analyzer processor will go to sleep and all LED's will turn off to conserve battery power. If the power switch is OFF, LED lights will not display while MyDx Analyzer is charging.

PANEL 1

## Analyzer Setup

PREPARE YOUR ANALYZER FOR TESTING:

1

### Charge the MyDx analyzer

Charge battery using power cord or micro USB cables provided.

It will take approximately 4.5 hours for an empty battery to recharge using the supplied power charger, and 8-15 hours using the USB connector.

When the analyzer is fully charged, the analyzer can perform repeated operations for a period of 6 hours before requiring a recharge. If the analyzer is in standby mode, then the analyzer can be on for 24 hours before a recharge. If the analyzer is in sleep mode (automatic after 30 seconds) the analyzer may keep a charge for up to 7 days.

2

### Install MyDx Application

Go to the *Apple App store*, or *Google Play* and download the **MyDx App**. After you have installed the application, start your MyDx App and create your MyDx Profile by registering.

3


### Ready the MyDx Analyzer

The MyDx Analyzer comes with an empty Sample Insert in the Insert Tray. If there is no Insert in the Tray, *place an empty Sample Insert in the MyDx Analyzer*.

#### Open Sample Insert Tray

Slide the Sample Insert Tray latch away from tray to release insert tray. The tray is on a spring activated system so once the latch is released; the tray will automatically open fully.

PANEL 2

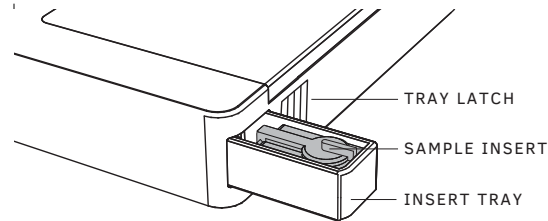

#### Place Sample Insert into Tray

Insert the Sample Insert into the Tray by *pointing the wedge part of the Sample Insert towards the inside of the MyDx Analyzer*. The bottom of the Sample Insert (visible cylinder chamber for sample) should be pointing to the bottom of the tray.

#### Pull Back Sample Insert to Tray

By pulling the insert backwards, it should settle into its proper position *level with the tray*. Sample Insert should now be flat in the Insert Tray.

#### Push Insert Tray Forward

You should *hear and feel a definite click* as the Insert Tray locks into place indicating a good seal.




PANEL 3

## MyDx Service Verification

4

### Perform Air Sample Analysis

Open the MyDx App. Select the CannaDx logo on the home screen. From the pop up menu select **Analyze with MyDx**.

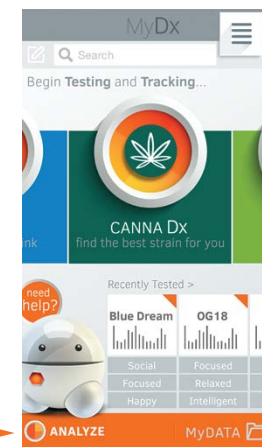

The MyDx Analyzer and MyDx App will sync. The MyDx App will prompt you to turn Bluetooth on if it is not already turned on.

PANEL 4



Once the MyDx Analyzer and mobile device have synced the MyDx App will prompt you to **select NEXT** once you have loaded a sample to Analyze. The MyDx analyzer's LED indicator light will turn blue. ●



Push start when you are ready to Analyze.



MyDx service verification complete. Now you are ready to perform Canna Chemical Analysis >

PANEL 5